

User manual

This device is used to clone 125KHz RFID card. It can clone EM4100, HID, AWID so that you should reference the device model when you work. It's very easy to use.

Parameter

Frequency	125KHz
Power	2 AAA battery, it can use 20,000 times
Distance	≤25mm (Keyfob) ≤60mm (Card)
Size	71 * 117 * 31 mm
Supported blank tag	T5577, EM4305

How to clone

1. Push power switch on the right of device, it will beep two or three times, and LED is on mean it works, if not re-start please.
2. Put the mother card near the antenna left of the device, and then press READ button, the device will beep and the LED is on when read successful, if beep 2 times go to step 3, if beep 3 times go to step 4, click READ again if it doesn't beep.
3. Change an new blank card as T5577/EM4305, then press WRITE button, when beep and PASS LED is on mean clone successful, if it doesn't beep and light please write again.
4. Change a blank T5577, then press WRITE button, when beep and PASS LED is on mean clone successful, if it doesn't beep and light please write again.
5. Repeat step 3 or step 4 if you want to make more same ID card.
6. Switch off for save power.

125KHz手持复制器
125KHz RFID Re-write

- ☐ 可复制EM4100
Support Em4100
- ☐ 可复制EM4100/HID/AWID
Support EM4100/HID/AWID

备注：

- (1) EM4100复制器开机滴2声
- (2) EM4100/HID/AWID复制器开机滴3声

Remark:

How to distinguish two device listed above?
(1) The device beep 2 times when power on is supported EM4100.
(2)The device beep 3 times when power on is supported EM4100, HID, AWID.



简介：

125KHz手持复制器是一个用于制作出和母卡一样卡号的设备，采用迷你手持外壳，符合人体工程学，便于携带；采用Silicon国际先进芯片，所有工作都由这颗芯片完成，使产品集成度更高，更稳定可靠；采用了优秀的程序算法和电路设计，降低了产品功耗，延长了电池使用寿命；采用一个读按钮和一个写按钮的设计，使操作更简单；可以复制ID(EM4100)卡、HID卡和AWID卡，并能穿透部分防火墙。

参数：

频率	125KHz	供电	2节7号电池，可复制2万次
距离	钥匙扣读写距离可达2.5cm，卡片可以达到6cm		
协议	可以复制ID卡、HID卡和AWID卡		
卡片	支持写入T5577、EM4305、CET5200以及所有的T5577、EM4305的兼容卡		

使用方法：

一、启动设备

- 1、把设备右侧的开关往上推，红灯常亮，绿灯和黄灯同时闪一下，蜂鸣器滴2声或3声，说明启动成功，否则重启一次即可。
- 2、当设备启动之后，这时不读任何卡，然后按设备写卡按钮，即可把卡片写成了全0的ID(EM4100)卡，写成功之后，蜂鸣器滴2声，绿灯亮起。
- 3、当按下任意按钮，黄灯亮起，表示设备正在工作。

二、复制ID(EM4100)卡

- 1、把设备右侧的开关往上推，设备滴2声或3声，绿灯和黄灯同时闪一下表示启动成功；
- 2、先把母卡放在设备左侧天线位置，按下读卡按钮，设备滴2声表示读卡成功，同时绿灯亮；
- 3、换一张新卡，按下写卡按钮，设备滴2声表示写卡成功，同时绿灯亮，复制成功。

三、复制HID和AWID卡

- 1、把设备右侧的开关往上推，设备滴3声，绿灯和黄灯同时闪一下表示启动成功；
- 2、先把母卡放在设备左侧天线位置，按下读卡按钮，设备滴3声表示读卡成功，同时绿灯亮；
- 3、换一张T5577卡，按下写卡按钮，设备滴3声表示写卡成功，同时绿灯亮，复制成功。